

## INSTALLING YOUR MOTHERBOARD

Installing your motherboard is the first step in building your own computer. Make sure you have gathered all of the tools and supplies you will need, including:


- #2 size Philips screwdriver
- zip ties
- flush cutters

Using an anti-static wrist strap or an anti-static mat is recommended.





- 1. Place your case on a flat work surface and remove the panels to access the motherboard mount. Remove the motherboard mount from the case, if it is removable.
- 2. Insert the standoff screws. The standoff screws will be included with your case.

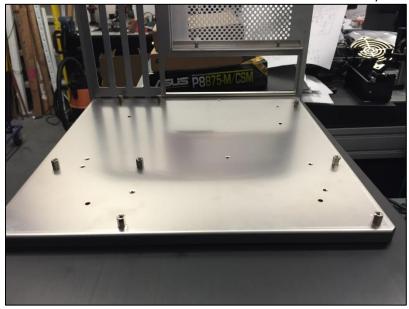



## Note

Consult your motherboard's documentation for your motherboard's screw hole pattern.


3. Install the motherboard I/O shield. It will snap into place from inside the case.





4. Align the motherboard with the I/O shield and standoff screws.

Be sure that the metal tabs on the inside of the I/O shield do not slide into the connectors! Make sure they slide on top of the connectors instead.

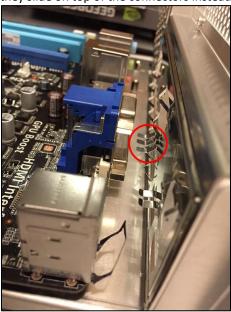

- 5. Gently press the motherboard into the I/O shield to align the motherboard's screw holes with the standoffs you installed in Step 2.
- 6. Secure the motherboard using the screws provided with your case.



## Caution

Do not overtighten the screws!

Once you have secured the motherboard to the case, you are ready to install the CPU.